### SITRANS FUE950 energy calculator

#### Overview



SITRANS FUE950 is a universal thermal energy calculator, which meets the requirements EN 1434 and has the MID and PTB K7.2 approval for energy metering with the media water.

SITRANS FUE950 has been developed for the SITRANS FUS380/FUE380 and alternatively MAG 5000/6000 or FST020. SITRANS FUE950 is modular in construction and can by order be fitted with optional modules depending on the application. The FUE950 supports none of the SITRANS FX, FC products and only some of the FUS clamp-on products.

#### Benefits

#### Basic functions

- Prepared for heating, cooling measurement
- Approval for MID for heat metering and PTB K7.2 for cooling
- High-accuracy thermal energy metering, meets EN1434 requirements
- Measured temperature range -20 ... +190 °C (-4 ... +374 °F)
- · Instantaneous values for energy/volume flow
- Battery or mains powered
- Battery version with battery lifetime of typically up to 10 years
- · Optical data interface
- Real date and time
- Auto-detection of 2-wire or 4-wire temperature sensors

#### Additional functions

- · Individual tariff functions
- Advanced functions for cooling/heating applications or the combination
- Memory for 24 periods (months, weeks, days)
- · Data logger function
- Expandable functionality with 2 optional plug and play add-on modules
- Communication over M-Bus, RS 485 or RS 232

#### Add-on modules


- Plug-in module with 2 extra pulse inputs
- Plug-in module with 2 pulse outputs
- Plug-in module with combination of input and output pulses
- Plug-in module for M-Bus communication
- Plug-in module for RS 232 or RS 485 communication
- Plug-in module with 2 passive current outputs (4 ... 20 mA)

#### Application


The SITRANS FUE950 is able to handle 3 kinds of applications, means energy calculation in:

- District heating applications
- Chilled water applications
- Combined cooling/heating applications


## Energy metering in heating, hot water applications (code "A" and "B")

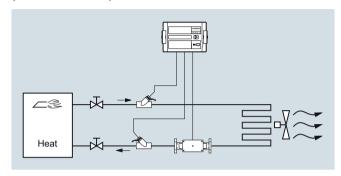

# Energy metering in cooling, chilled water applications (code "C" and "D")

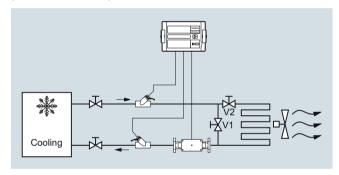

## Energy metering in combined cooling/heating applications (code "E" and "F")

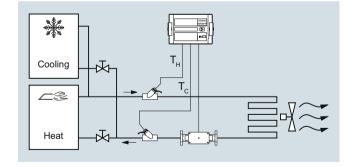

SITRANS F US Inline

### SITRANS FUE950 energy calculator

#### Design

SITRANS FUE950 has an easy-read 8-digit LCD display with associated pictograms for the various functions. As the display has been made for several applications, some figures/symbols not used for normal district heating applications will be shown.

SITRANS FUE950 has a push button for simple operation and provides user-friendly control via the various display menu loops. The display will always be configured for the application chosen, and for the selected display settings.

The integrator has an IP54 plastic housing and is designed for wall or panel mounting. The housing comes with prepared rubber gaskets cable entries for fast and easy installation.

#### Operation menu loop structure

The FUE950 display has six menu loops and the menus are numbered in the display from 1 to 6. Some display menus consist of two values (to maximum seven) that are shown alternately at 4second intervals

The main menu loop no. 1 with the current data, e.g. for energy, volume, flow rate and temperature, is preprogrammed as default setting

In the combined heating/cooling configuration the menu loop no. 5 (tariff menu loop) will be activated additionally.

#### Display and output pulses

Units: MWh, GJ, Gcal, MBtu, m<sup>3</sup>, gal, m<sup>3</sup>/h, GPM, °C, °F and kW; all decimal points are statically (the unit "gal" is shown with factor

The display unit and the last fractional digit are typical used for the pulse outputs.

#### Function

#### Technical principle

Calculation of energy is based on the following formula:

Energy = Volume x  $(T_{Hot} - T_{Cold})$  x  $K_{factor}$   $(T_i)$ 

Volume: Volume [m<sup>3</sup>] of a given amount of volume pulses

T<sub>Hot</sub>: Measured temperature in the hot line

T<sub>Cold</sub>: Measured temperature in the cold line

K<sub>factor</sub> (T<sub>i</sub>): Thermal coefficient of media enthalpy and heat

The energy calculation is made by a counter and depends on temperature difference, pulse input frequency and legal requirements.

The calculator always carries out at least one energy calculation every 2 seconds. If the connected flowmeter has not sent enough pulses the energy calculation and flow indication is also based on the 8 seconds value.

### Data memory

The FUE950 has a history memory of 24 periods (months, weeks, days). The following values are stored monthly, weekly or daily in the EEPROM on the programmed day of 1...31 (via software tool).

- Date/Time
- Volume
- Energy
- · Error day counter
- Tariff energy 1
- Tariff energy 2
- · Maximum monthly flow rate
- Maximum monthly power
- Tariff definition 1
- · Date of maximum monthly flow rate Date of maximum monthly power
- Tariff definition 2 • Pulse counter input 1
- Pulse counter input 2
- · Operation hours

#### Data logger memory (LOG)

The LOG of the calculator is stored every 24 hours with all cumulative values in the EEPROM. The storage frequency can be selected from various storage intervals (5, 6, 10, 12, 15, 20, 30, 60 minutes or the default setting of 24 hours). The data which are stored in the LOG could be read out using a software tool and can be used for evaluations.

#### Extract of possible LOG settings

Storage interval	Values	Number of data records	Recording period
5 minutes	• Error status	440	36.6 hours
15 minutes	<ul> <li>Overload time temperature</li> </ul>	440	110 hours
1 hour	<ul> <li>Overload time flow</li> </ul>	440	18.3 days
24 hours (default setting)	rate Forward temperature Return temperature Date and time Energy Tariff energy 1 Tariff energy 2 Tariff definition 1 Tariff definition 2 Volume Error day counter	440	440 days

#### Maximal Values

The integrator creates max. values for power and flow rate based on consumption time, which are stored in the EEPROM. The integration intervals are adjustable to 6, 15, 30 or 60 minutes and 24h. Default setting is 60 minutes.

#### Tariff/Accounting date function

The calculator includes two independent memories in which the accumulated energy at two programmable tariff dates are stored.

- Last accounting date
- · Last but one accounting date

#### Values stored

- Energy
- Volume
- Tariff counter 1
- Tariff counter 2
- Pulse counter 1
- Pulse counter 2
- Date

The integrator offers two optional tariff memories for monitoring plant load states. Here it concerns threshold value tariffs. Extensive tariff conditions make it possible to adapt the calculator individually to the required customer-specific applications

Both tariffs are separately configurable and independent from each other. Energy or time can be measured alternatively per tariff register dependent on the tariff mode adjusted in each

With the "time triggered tariff function" the switch-on time and the switch-off time are adjustable independent from each other for each day of the week in steps of 15 minutes.

The following tariff limit types of the tariff function are possible: (This example applies to the display at 1 fractional digits after comma)

Туре	Description	Limit	Limit resolution
dT	Temperature difference	1 190 °C	1 °C
-dT	Negative temperature difference	1 190 °C	1 °C
TR	Return temperature (low)	1 190 °C	1 °C
TV	Forward temperature (high)	1 190 °C	1 °C
Р	Power	10 2 500 kW	10 kW
Q	Flow	1 255 m <sup>3</sup> /h	1 m <sup>3</sup> /h
FE	"Theoretically forward energy" with return temperature of 0 °C		
Z	"Time triggered" counting energy		
Е	"External" counting energy		

#### Error handling and memory

Events such as changes and faults are stored in a non-volatile memory with a capacity of up to 127 entries. The following events are recorded:

- Checksum error
- Temperature measurement error
- Error hours
- · Start and end of test mode

If SITRANS FUE950 records an error, this will be automatically indicated by a "alarm symbol" on the display.

To protect the reading data, all the relevant data are saved in a non-volatile memory (EEPROM). This memory saves the measured values, device parameters and types of error at regular intervals.

The following events are recorded:

- Temperature sensor error
- Swapped hot and cold temperature sensors
- · Battery low warning
- Power supply failure
- · Optical communication warning
- RAM checksum error

#### Outputs/Inputs/Communication

#### Communication interfaces:

SITRANS FUE950 is fitted with an optical infra-red send/receive port in accordance with EN1434/IEC 61107, protocol standard, EN 1434/EN 60870-3 (M-Bus protocol).

A specific optical head with a permanent magnet (IrDA-adapter) in accordance with EN 1434 can be used for readout data or communication with the parameterization software.

#### 2 ports for optionally plug-in modules

The calculator features 2 ports for the plug-in modules.

One slot is for the function modules and the other for the communication modules.

#### Communication modules

The following communication modules are available as options: RS 232 module, RS 485 module and M-Bus module. The RS 232 and RS 485 communication modules are serial interfaces and permit data exchange with the calculator. For this purpose a special data cable is necessary.

The M-Bus module is a serial interface for communication with external devices (M-Bus Master/Centre). According to the M-Bus structure a number of calculators can be connected to a control centre.

#### Pulse input module

Two pulse inputs are available. The pulse value and the unit is configurable for energy, water, gas or electrical meter by parameterization software. Data are separate cumulated in different registers and are also stored on the two accounting day's (Tariff registers).

#### Combined Pulse Input/Output module

Two pulse inputs combined with one pulse output are available on one module. The pulse inputs are configurable with value and the unit by parameterization software.

The pulse output is also programmable using the parameterization software.

#### Pulse output

The calculator provides levels for two optional external pulse outputs, which can be freely programmed using the parameterization software tool.

Default setting is one pulse which occurs per change in the least significant digit in the display with the unit and resolution selected by the device ordering.

Possible pulse output values

- Energy (default setting)
- Volume (default setting)
- Tariff energy 1
- Tariff energy 2
- Tariff condition 1, limit switch
- · Tariff condition 2, limit switch
- Energy error
- Volume error
- Volume with specific resolution (0.1, 1.0, 10 or 100)
- Energy with specific resolution (0.1, 1.0, 10 or 100)

#### Combined current output module

Optional module with 2 passive 4 ... 20 mA outputs.

Possible output values:

- Power (default setting for output #1)
- Flow (default setting for output #2)
- Hot, cold or difference temperature

The settings can be configured by parameterization software. The current output module occupies both ports, means no other plug-in module will possible to plug in.

#### Module combinations

The calculator has a group of extension modules for communication and another group of extension modules for additional functionality. These modules are available first selected within the calculator, or for retrofitting in the field.

One single function module as well as one single communication module out of following modules is selectable.

Function modules:

- Pulse input module, 2 inputs
- Pulse output module, 2 outputs
- Combined pulse module 2 inputs, 1 output
- Combined current output module, 2 x passive 4 ... 20 mA (occupies both ports)

Communication modules:

- M-Bus (M-Bus protocol according EN 1434-3)
- RS 232 (M-Bus protocol according EN 1434-3)
- RS 485 (M-Bus protocol according EN 1434-3)

#### SITRANS F US Inline

#### SITRANS FUE950 energy calculator


#### Integration

SITRANS FUE950 is a multi-purpose energy calculator for media water which meets the requirements of EN 1434. Further, the energy calculator has been specially developed to process volume pulses from SITRANS FUS380/FUE380 or alternatively MAG 5000/6000 or FST020 transmitter.

#### Technical specifications

Approval MID approved in accordance with energy meter EN 1434 and PTB K7.2 (German national cooling approval) Approved temperature range 0 ... 180 °C (32 ... 356 °F) Heating 0 ... 105 °C (32 ... 221 °F) Cooling Absolute temperature range -20 ... +190 °C (-4 ... -374 °F) Differential temperature Heating 3 ... 177 K (starting at 0.1 K) • Cooling 3 ... 102 K Meets requirements of EN 1434 Measuring accuracy Typically max.  $\pm (0.5 + 3K/\Delta\Theta)$  [%] of measured value Measuring rates Battery type D-cell Volume: 1 s, temperature: 4 s · Mains versions Volume: 1/8 s, temperature: 2 s Flow range Depends on pulse input value (INO), see "Selection and Ordering data". Power range value Depends on pulse input value as follows: Pulse input Max power [kW] value (I/P or gal/P) 15 000 2.5 15 000 5 15 000 10 150 000 25 150 000 50 150 000 1 500 000 100 250 \*) 1 500 000 500 \*) 1 500 000 15 000 000 1 000 \*)

### Typical accuracy of FUE950

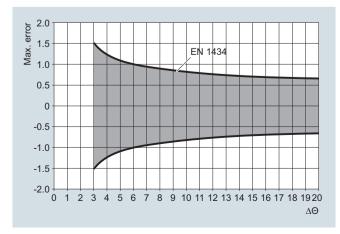

\*) not available for gal/pulse

User interface (always included)	
Display	8-digit LCD display with associated pictograms/symbols
Units	MWh, GJ, Gcal, MBtu, m <sup>3</sup> , m <sup>3</sup> /h, GPM, gal, °C, °F, kW, MBtu/h (gal is shown with factor x 100)
Totalizer value range	99 999 999 or 9 999 999.9 (0 and 1 digit after comma). Display dig- its: Flow in 6 digits; Volume, power and energy in 8 digits
Values	Power, energy, volume, flow rate, temperatures
Push button	Single push button for the menu controlling
Optical interface IrDA interface	ZVEI optical interface with M-Bus protocol as per EN 1434, connection via separate IrDA-adapter baud rate: 300 or 2400
Rated operation conditions	
Enclosure	IP54 in accordance with IEC 529
Material	
Housing	C Lexan 141R (or similar); colors: light gray (top part) and black (bottom part)
Pipe/wall fitting	PA 6.6 GF25 (or similar)
Other plastic parts	ABS Cycolac GPM500 (or similar)
Gaskets	Neoprene and rubber cable bushings: EPDM 50
Rubber cable bushings	EPDM 50
Temperature	
• Ambient	5 55 °C (41 131 °F)
• Storage	-25 +70 °C (-13 +158 °F) Relative ambient humidity < 93 %

## Temperature input (always included)

• Electromagnetic class

Environment class

• Mechanic class

Function

The temperature sensors must be connected to terminals 1-5 and 6-2 (TH) and 3-7 and 8-4 (TC) depending on cable type (2-wire or 4-wire).

Temperature range
Absolute measuring range

The temperature sensors must be connected to terminals 1-5 and 6-2 (TH) and 3-7 and 8-4 (TC)

Temperature range
Absolute measuring range

M1/M2

E1/E2 (MID) or C (DIN EN 1434)

Temperature difference

Start 0.1 K, min. 3 K, max. 177 K

Measurement cut-off

0.125 K

16-bit digital resolution AD con-

Display resolution

T<sub>H</sub> and T<sub>C</sub>: 0.1 K ,  $\Delta$ T: 0.1 K

Sensor types

Pt100 or Pt500 as 2-wire or 4-wire; Standard is Pt500.
Sensor cable length: up to 10 m (according EN 1434 and MID-

Sensor connection 4-wire or 2-wire; auto detection of connection version

type approval).

## Flow input (IN0) (always included)

Function

Used as standard for flow input of the external flowmeter. The input is marked as 10 (+ Flow Pulse), 11 (- Gnd) on the terminal strip.

Note: The pulse input value selection must be the same as the pulse output setting of the flowmeter.

## SITRANS FUE950 energy calculator

			to record chargy calculator
Pulse value	1 1 000 l/pulse or 1 100 gal/pulse, selection by corre- sponding Order code. Will be shown at the device label	Possible pulse output selection	Energy (default setting for 'Out1')     Volume
Pulse frequency	≤ 100 Hz (200 Hz)		(default setting for 'Out2')  • Tariff energy 1
Pulse ON-time	≥ 3 ms		Tariff energy 2
Pulse OFF-time	≥ 2 ms		• Tariff condition 1 (limit switch)
Type	Active pulse input		<ul> <li>Tariff condition 2 (limit switch)</li> </ul>
Terminal voltage	3.6 V DC (supplied internally by		• Energy error
<u> </u>	FUE950)		<ul><li>Volume error</li><li>Volume with specific display res-</li></ul>
Flowmeter installation place	The flowmeter installation place can be in the hot line or cold line ("forward or return pipe") selected by corresponding Order code.		Volume with specific display resolution (or with factor 0, 1, 10 or 100 thereof)  Energy with specific display resolution (or factor 0.1 thereof)
	The "installation place" will be shown at the device display and nameplate	Pulse input	resolution (or factor 0.1 thereof)
Connected cable	Max. 10 m (shielded cables are highly recommended)	Function	Add-on module for two additional counters. The pulse input 1 is marked as I1, 'gnd' and the input
Ports for option modules			2 as I2, 'gnd' on the terminal strip
Туре	The calculator features 2 ports for optional plug-in modules.		and indicated in the display as separate registers IN1 and IN2 and can also be transferred via
Function modules (Port 1 or 2)	<ul> <li>Pulse input module, 2 inputs (In1, In2)</li> </ul>	_	the communication modules.
	<ul><li>Pulse output module, 2 outputs (Out1, Out2)</li></ul>	Туре	Passive "open collector" pulse inputs, outputs not potential isolated to each other, data are sep-
	Combination module of 2 inputs (In1, In2) and 1 output (Out1)		arate cumulated in different registers and are also stored on the two accounting day's.
Current output module (Port 1)	2 passive 4 20 mA (#1, #2) (occupies both port 1 and 2)	Pulse value	Pulse value and the unit are configurable for energy, water, gas or
Communication modules (Port 1 or 2)	M-Bus, RS 232 or RS 485 (M-Bus protocol, according EN 1434-3)		electrical meter by a software tool Default: Pulse input 0.1 m <sup>3</sup> or 1 gal (if unit 'gal' is ordered with
Pulse output			the Z-option "L05")
Function	The module contains connections for 2 pulse outputs, which can be	Pulse frequency	≤ 8 Hz
	programmed as desired using a	Pulse length	≥ 10 ms
	software tool. The pulse outputs are marked as standard as O1, 'gnd' and O2, 'gnd' on the termi-	External voltage supply	3 V DC (supplied internally by FUE950)
	nal strip and Out1 respectively Out2 in the display.	Current	based on $R_i$ = 2.2 $M\Omega$
Туре	Passive "open collector" pulse	Cable length	< 10 m connection limit
316-5	output, outputs potential isolated to each other	Current output module	
Pulse value	Last significant digits of the dis- play (unit/pulse), selection by cor- responding Order code and setting can be read via display menu, settings changeable via software tool	Function	The module contains connections for 2 passive current outputs, which can be programmed individually using the software tool. The outputs are marked "#1" and "#2" with corresponding polarity "+" and "" on the terminal strip.
Pulse output 1	SUILWAIE LUUI		The module will be connected on
Pulse frequency	≤ 4 Hz		port 1 only, but both ports are occupied by the module.
Pulse width	125 ms ± 10 %	Terminal voltage	External supply: 10 30 V DC
Pulse duration	125 ms ± 10 %		(passive output)
Pulse break	≥125 ms -10 %	Signal range	4 20 mA; 4 mA = 0 value and 20 mA = default maximum values
Pulse output 2			(for #1: Power in kW and for #2:
Pulse frequency	≤ 100 Hz, depending on the selected pulse length		Flow with the max. values and selected unit).  Defaults:
• Ratio	Pulse duration/pulse break ~1:1		For power it is the max. selectable
Pulse length	5, 10, 50, 100 ms (default: 5 ms)		value x 100 000 the last digit of
External voltage supply	3 30 V DC		display (e. g. 20 mA = 10 000 kW (1 digit res.) or 100 000 kW
Current	$\leq$ 20 mA with a residual voltage of $\leq$ 0.5 V		(0 digit res).  For flow it is the max. selectable
			value x 10 000 the last digit of display (e. g. 20 mA = 1 000.0 m <sup>3</sup> /h (1 digit res.) or 10 000 m <sup>3</sup> /h (0 digit res.).

#### SITRANS F US Inline

### ITDANC FUEDEO

SITRANS FUE950 ene	ergy calculator	
Load	Max. 800 Ω	Power consumption
Upper limit	Up to 20.5 mA (exceed causes the error current value)	230 V and 24 V versions 3.6 V D-cell battery
Signal on alarm	Errors are indicated with 3.5 mA or 22.6 mA (programmable, default: 3.5 mA)	3.0 v D-ceil ballery
Output values	Power, flow, temperature (configuring via software tool; default: for #1: Power and for #2: Flow)	Supply data
M-Bus output		Battery, 3.6 V type (option)
Туре	The optional M-Bus plug-in mod- ule is a serial interface for com- munication with external devices (M-Bus Repeater)	230 V AC module (option)
Protocol	M-Bus according EN 1434-3	
Connection	The connection is not polarity-conscious and is electrically isolated, connection of 2 x max.  2.5 mm² wires, 300 or 2400 baud (auto baud detection), current drawn: one M-Bus load.	24 V AC module (option)  Battery backup (option)
	M-Bus address: Each port has its own primary M-Bus address (Prim1 = the last two digits of the serial number; Prim2 = 0). The secondary address is unique for each calculator and is factory-set to equal the serial number.	
RS 232 output		Accessories/Software
Туре	The optional module RS 232 is a serial interface for data transmission with external devices, e.g. PC; baud rate: 300 or 2400. The module contains a 3-pole terminal strip with terminals marked 62 (TX), 63 (RX) and 64 (GND). For this purpose a special data cable is necessary.	The parameterization so nient tool for handling thused for configuration of different memories, print tails please contact your A specific optical head was nient to the parameter of the paramet
Protocol	M-Bus according EN 1434-3	(IrDA adapter with blueto used for programming/a
Connection	The module contains a 3-pole terminal strip with terminals marked	configuration data, etc. change measuring data.

## RS 485 output

Function

The optional RS 485 module is a serial interface for data transmission with external devices, e.g. PC; baud rate: 2400. The module contains a 4-pole terminal strip with terminals marked D+, D-, Vcc and GND.

62, 63, 64 (max. 2.5 mm<sup>2</sup>); Connected cable length: max 10 m;

For communication with a PC a special adapter cable is required (Article No. A5E02611774).

Protocol

M-Bus protocol according EN 1434-3

Connection

Terminals D+ and D-; electrically isolated; 2400 baud only.

An external supply of 12 V DC ± 5 V (<5 W) is needed for the module (terminals Vcc and GND). The module terminals are max. for 2.5 mm<sup>2</sup> wires. Connected cable length: max. 10 m

## re

software based on the M-Bus is a convethe calculator. It runs on Windows and is of the calculator functionality, reading out rinting out calculator logs. For further deour local Siemens representative.

Typical current appr. 0.15 VA Typical battery lifetime 10 years under normal conditions (no addon modules, max. 40 °C ambient

Internal voltage 3.6 V by the battery or plug-in power supply mod-

3.6 V lithium D-cell, battery lifetime

typically 16 years with independently powered flowmeter Plug-in module for 230 V AC (195 ... 253 V AC), 50/60 Hz (incl.

Plug-in module for 24 V AC (12 ... 30 V AC) (incl. battery backup)

Only with mains supply modules by internal 3.0 V lithium battery (type CR 2032)
Displayed values, date and time

are still updated, but the measuring functions have stopped, including the flow rate measurement. Communication via optional modules M-Bus, RS 485, RS 232


or optical interface is maintained, affecting the backup battery life-

temperature)

battery backup)


ad with a permanent magnet in uetooth) accordance with EN 1434 can be g/altering programming of readout data, c. The reader head can also be used to ata.

#### Dimensional drawings

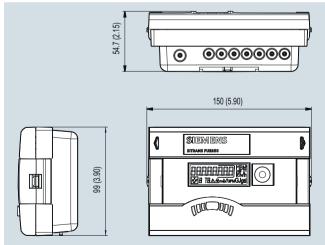


SITRANS FUE950, dimensions in mm (inch)

### SITRANS FUE950 energy calculator

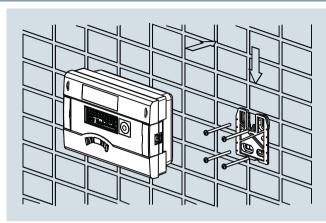

#### Wall mounting

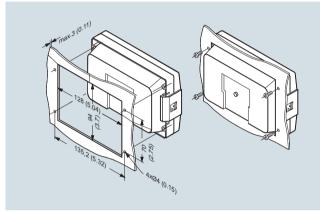

Panel mounting, dimensions in mm (inch)

#### Pt500 temperature sensor pairs

#### Application

The temperature sensor set is designed for use with the Siemens energy calculator type SITRANS FUE950 for measurement of the energy consumption in a district heating or cooling

Temperature sensors are one of the integral components of every thermal energy meter in heating or cooling applications. They are used for determining temperature changes in fluids due to energy taken from or supplied to the loop. The temperature is thus measured by mounting temperature sensors upstream and downstream from the point where the exchange in the thermal energy of the system is.

To ensure an accurate measurement of the temperature difference according to MID (EN 1434) or PTB K7.2 the sensors are delivered as matched pairs.

By selection with the corresponding Order code the Pt500 sensor pair sets can be delivered with heating approval or with approvals for combined heating/cooling applications.

#### Technical specifications

#### Temperature sensor pairs:

#### 2-wire Pt500

Measuring insert Pt500 temperature sensor, EN 60751, tolerance class B,

2-wire

Pairing Paired to EN 1434 (10 ... 130 °C/14 ... 266 °F)

Media temperature 0...150 °C (32 ... 302 °F)

Response time T<sub>0.5</sub> See sensor pocket specifications

Medium Typically heating water

Pressure rating See sensor pocket specifications

Protection

Pipe material AISI 304Ti/1.4303

Dimension  $\emptyset$  6 mm Sensor tube length 50 mm

Up to 10 m (32.8 ft), fixed connected silicon cable, 2 connec-Cable length

tion wire terminals, terminal sleeves to DIN 46228

#### 4-wire Pt500

#### Pt500 4-wire temperature sensor pair (with MID and PTB K7.2 approval)

Measuring insert Pt500 temperature sensor, EN 60751, tolerance class to ISO 751 Class B; 4-wire

Pairing

Matched paired according to EN 1434 at 10, 75 and 140 °C (50, 167 and 284 °F)

Type approval MID (DE-06-MI004-PTB011) and PTB K7.2 (PTB 22.77/09.01). Only to be mounted with related

sensor pockets according to the type approvals.

Media temperature 0...150 °C (32 ... 302 °F)

Permissible temp. pair range for  $\Delta T$ 

 Heating 3 ... 150 K 3 ... 85 K Cooling

Medium Approved for heating/cooling

water

Protection IP65

Environment

• Mechanic class МЗ

• Electromagnetic class E1 (MID)

Pressure rating See sensor pocket specifications

Material

Stainless steel AISI 304Ti/1.4571 Protective tube

(or similar), diameter of protec-

tive tube: 6 mm

 Connector cable Silicon cable, 4 connection wire

terminals, terminal sleeves to DIN 46228

Sensor tube length 140 or 230 mm

(5.51 or 9.06 inch)

Cable length 5 m (16.4 ft), fixed connected

SITRANS F US Inline

#### SITRANS FUE950 energy calculator

#### Sensor pockets

#### Stainless steel sensor pocket (for 4-wire Pt500 types only - standard)

Media temperature 0 ... 150 °C (32 ... 302 °F)

Approval Approved only together with 4-wire sensors

Medium Approved for heating/cooling water; up to max.

5 m/s flow velocity

Pressure rating PN 40

Length Face-to-face length 120/135 and 210/225 mm

(4.72"/5.23" and 8.27"/8.86")

External diameter Protective tube 8/11 mm (0.32"/0.43")

Internal diameter Protective tube 6 mm (0.24")

Pipe connection Thread G 1/2" (with sealing screw for sensor)

Material Protective tube AISI 316Ti/1.4571 (or similar)
Use Use with related 4-wire Pt500 sensors only

(according type approval)For flow velocities up to 5 m/s

 Recommended to install with welded sleeve (according to EU standard)

## Stainless steel sensor pocket (for 2-wire Pt500 types only - some only available as spare part)

Media temperature 0 ... 180 °C (32 ... 356 °F)

Medium Approved for heating water

Response time  $T_{0.5}$  Typically 13 s at 0.4 m/s without pasta

Typically 5 s at 0.4 m/s with pasta

Pressure rating PN 25

Length L1 (mm) 92

L1 (mm) 92 127 168 223 L (mm) 82 117 155 210

Material Stainless steel: AISI 316Ti/1.4571
Use For 2-wire Pt500 types only

## Brass sensor pocket (for 2-wire Pt500 types only - some only available as spare part)

Media temperature 0 ... 150 °C (32 ... 302 °F)

Medium Approved for heating water

Response time  $T_{0.5}$  Typically 9 s at 0.4 m/s without pasta

Typically 5 s at 0.4 m/s with pasta

Pressure rating PN 16


Length L1 (mm) 47 92 127 L (mm) 40 82 117

Material Brass: CuZn<sub>40</sub>Pb<sub>2</sub> (Ms58)
Use For 2-wire Pt500 types only

#### Dimensional drawings


### Pt500 2-wire temperature sensor pair (EN 1434)

Cable length 2, 3, 5 or 10 m ('C' at the dimensional drawing)

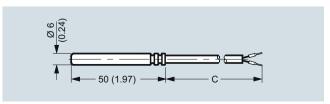


Pt500 2-wire temperature sensor, dimensions in mm (inch)

#### Pt500 4-wire temperature sensor pair (with MID and PTB K7.2 approval)

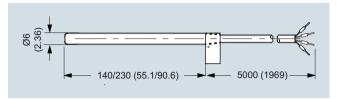


Pt500 4-wire temperature sensor, dimensions in mm (inch)

Stainless steel sensor pocket (for 2-wire Pt500 types only)					
Length	L1 (mm)	92	127	168	223
	L (mm)	82	117	155	210

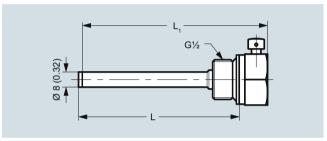


Sensor pocket (for 2-wire Pt500 types only), stainless steel, dimensions in mm (inch)

#### Stainless steel sensor pocket (for 4-wire Pt500 types only)

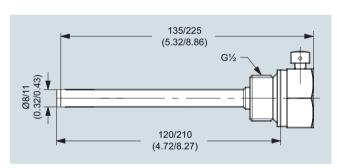

Stainless steel sensor pocket, dimensions in mm (inch)

Brass sensor pocket (for 2-wire Pt500 types only)				
Length	L1 (mm)	47	92	127
	L (mm)	40	82	117

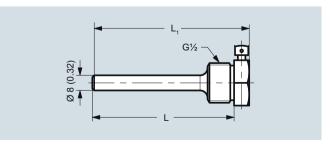

Sensor pocket, brass (for 2-wire Pt500 types only), dimensions in mm (inch)

## SITRANS FUE950 energy calculator

Selection and Or			Article No.		Order o
Energy calculato	r SITRANS FUE	950, MID or PTB K7.2 custody transfer approved	7 M E 3 4 8 0 -		
Click on the Ar     Ar     Click on the Ar     Click on	ticle No. for the	online configuration in the PIA Life Cycle Portal.			
To get optimal fun o the maximum fl The following calc o ms: L/pulse > C	alue selection madetion and perfor ow rate. culation formula of max (m <sup>3</sup> /h)/360.	ust be the same as the pulse output setting of the selected flowmeter. mance the pulse value must be selected as low as possible according can be used for determining the lowest pulse value at a pulse length of pulse > 300/360; L/pulse > 0.83; therefore the pulse value must be			
1 l/pulse.	χ σσσ ,, <u>-</u> ,,	yano yano yano yano yano yano yano yano			
Pulse input in I/pulse or in gal/pulse (with option L05)	Flow limit Q <sub>max</sub> in m <sup>3</sup> /h	Flow limit Q <sub>max</sub> in GPM *) (with option L05)			
1	360	6 000	2 A		
2.5	900	15 000	2 B		
5	1 800	30 000	2 C		
10 25	3 600	60 000 150 000	3 A		
25 50	9 000	300 000	3 B 3 C		
100	36 000	600 000	4 A		
250	90 000	-	4 B		
500	180 000	_	4 C		
1 000	360 000	-	5 A		
) GPM = Gallons		I			
Calculator applic	ation/Flowmete	er installation place			
or heating, flown	neter in return pi	pe (cold pipe), typical standard		A	
or heating, flown	neter in forward	pipe (hot pipe)		В	
For heating, flowmeter in forward pipe (hot pipe) For cooling, media water, flowmeter in forward pipe (cold pipe)				С	
For cooling, media water, flowmeter in return pipe (hot pipe)				D	
For combined cooling/heating, flowmeter in forward pipe (hot pipe as heating)				E	
MID conformity of					
or combined coomity of		wmeter in return pipe (cold pipe as heating)		F	
		auiig)			
Temperature sen		ded (standard)			
Pt500 setup, no se	•	r (6/140 mm), 4-wire with 5 m connection cable, 6 mm sensor diameter		0 3	
and 140 mm sens	or length. MID a	pproved DE-06-MI004-PTB011, PTB approved 22.77/09.01, incl. factory are only valid if temp. sensors are used with the applicable temperature		3	
and 230 mm sens	or length. MID a	r (6/230 mm), 4-wire with 5 m connection cable, 6 mm sensor diameter pproved DE-06-MI004-PTB011, PTB approved 22.77/09.01, incl. factory are only valid if temp. sensors are used with the applicable temperature		4	
Pt100 setup, no s	ensor pair includ	led		5	
50 mm length, wit	h MID approval	air (6/50 mm), 2-wire type incl. 5 m cable, 6 mm sensor diameter and (only for use with the applicable temperature sensor pockets)		6	
		air (6/50 mm), 2-wire type incl. 10 m cable, 6 mm sensor diameter and (only for use with the applicable temperature sensor pockets)		7	
		: (for 6 mm sensor diameter)			
No pockets (stand	•	·		0	
,	,	nsors, length 82/92 mm, G½ inch, max. PN 16 (2 pcs.)		2	
		m length for 6 mm sensor diameter, max. PN 40 and max. 5 m/s		5	
2 pcs. for 140 mr					
Stainless steel po	ckets for 6 mm 2	2-wire sensors, length 117/127 mm, G½ inch, max. PN 25 (2 pcs.)		6	
Stainless steel pocket, 210/225 mm length for 6 mm sensor diameter, max. PN 40 and max 5 m/s (2 pcs. for 230 mm 4-wire sensors above)				7	
2 pcs. for 230 mr		2-wire sensors, length 155/168 mm, G½ inch, max. PN 25 (2 pcs.)		8	
	CRCIS IOI O IIIII 2				
Stainless steel po	CRCLO IOI O ITIIII Z				
Stainless steel po		pe) (standard)		1	
Stainless steel po Voltage supply Battery 3.6 V DC	(Litium D-cell typ	pe) (standard) S supply (incl. back-up battery)		1 2	
Stainless steel po Voltage supply Battery 3.6 V DC ( Mains power mod	(Litium D-cell typ Iule for 230 V AC			1 2 3	

## SITRANS FUE950 energy calculator

STI HANS FOE950 effergy calculator	
Selection and Ordering data  Energy calculator SITRANS FUE950, MID or PTB K7.2 custody transfer approved	Article No. Order code  7 ME 3 4 8 0
	7 ME 3 4 8 0 -
Option modules	
No module (standard)	A
1 module (communication module) M-Bus module	В
RS 232 module (M-Bus protocol)	c
RS 485 module (M-Bus protocol)	D
1 module (function module)	
Pulse output, 2x output (Out1 "Energy" and Out2 "Volume") Pulse input, 2x input (In1 and In2)	E F
Pulse out-/input combination, 2x input and 1x output	G
Combination of 2 modules (communication and function module)	
M-Bus module and Pulse output, 2x output (Out1 "Energy" and Out2 "Volume")	н
M-Bus module and Pulse input, 2x input (In1 and In2)	J
M-Bus module and Pulse out/-input combination, 2x input and 1x output	K
RS 232 module (M-Bus) and Pulse output, 2x output (Out1 "Energy" and Out2 "Volume")	L
RS 232 module (M-Bus) and Pulse input, 2x input (In1 and In2) RS 232 module (M-Bus) and Pulse out/-input combination, 2x input and 1x output	M N
RS 485 module (M-Bus) and Pulse output, 2x output (Out1 "Energy" and Out2 "Volume")	P
RS 485 module (M-Bus) and Pulse input, 2x input (In1 and In2)	Q
RS 485 module (M-Bus) and Pulse out/-input combination, 2x input and 1x output	R
Combination current output module, 2x passive 4 20 mA (Out 1 "Power", Out 2 "Flow")	S
(occupies both module Ports 1 and 2)  Display units and resolutions	
MWh & kW, m <sup>3</sup> , m <sup>3</sup> /h in 2 digit resolution; Temperature: no decimal figures MWh & kW, m <sup>3</sup> , m <sup>3</sup> /h in 1 digit resolution; Temperature: no decimal figures	C D
MWh & kW, m <sup>3</sup> , m <sup>3</sup> /h in 0 digit resolution; Temperature: no decimal figures	E
GJ & kW, m <sup>3</sup> , m <sup>3</sup> /h in 2digit resolution; Temperature: no decimal figures	н
GJ & kW, m <sup>3</sup> , m <sup>3</sup> /h in 1 digit resolution; Temperature: no decimal figures	J
GJ & kW, m <sup>3</sup> , m <sup>3</sup> /h in 0 digit resolution; Temperature: no decimal figures	K
Gcal & kW, m <sup>3</sup> , m <sup>3</sup> /h in 2 digit resolution; Temperature: no decimal figures Gcal & kW, m <sup>3</sup> , m <sup>3</sup> /h in 1 digit resolution; Temperature: no decimal figures	M N
Gcal & kW, m <sup>3</sup> , m <sup>3</sup> /h - in 0 digit resolution; Temperature: no decimal figures	P
MBTU & MBTU/h, m <sup>3</sup> , m <sup>3</sup> /h in 2 digit resolution; Temperature: no decimal figures	Q
MBTU & MBTU/h, m <sup>3</sup> , m <sup>3</sup> /h in 1 digit resolution; Temperature: no decimal figures	R
MBTU & MBTU/h, m³, m³/h - in 0 digit resolution; Temperature: no decimal figures	S
Verification/Approval	
Without type approval mark, neutral label (standard)) With MID type approval mark (only for heating combinations, selection "A, B, E and F")	0
With MID approval mark and first MID verfication (only for heating, selection A, B, E and F")	2
Cooling approval mark, German national cooling approval according PTB-TR-K7.2 (only for cooling and	7
media water, selection "C and D")	
Cooling approval mark, German national cooling approval according PTB-TR-K7.2 and first verification (only for cooling and media water, selection "C and D")	8
Further designs Please add "-Z" to Article No. and specify Order code	
Certificate	
Including factory test report (certificate) of FUE950	ALWAYS INCLUDED
Cooling, setup for non water	ALWATO INCLUDED
Water/glycol setting for media type "Tyfocor LS (R)" (only with neutral label, no verification and approval)	COZ
Optional settings/programming	602
Tariff function settings (specify in clear text, up to max. 20 characters)	D 0 2
Pulse output settings (specify in clear text, up to max. 20 characters)	D 0 6
Pulse input setting of option module (specify in clear text, up to max. 20 characters)	D 0 8
Pulse input setting of 4 20 mA option module (please specify 20 mA related type and value in clear text, up to max. 20 characters)	D10
Special display units	
Flow in 'GPM' and Volume in 'gal' (x100) (digits/resolution as selected above, only with 0 digit resolution)	LOS
	L 3 1
Temperature in deg. F (digit resolution as selected above)	L31

#### SITRANS FUE950 energy calculator

# Flowmeter SITRANS FUE950 operating instructions, accessories and spare parts

#### Operating instructions

Description	Article No.
• English	A5E03424739

All literature is available to download for free, in a range of languages, at www.siemens.com/processinstrumentation/documentation

#### Accessories

Description	Article No.
Infrared optical head (Bluetooth type) for data acquisition & programming of FUE950	A5E02611768
Bracket for SITRANS FUE950 wall mounting (20 pcs.)	A5E02611769
Cable for data acquisition via RS 232 PC/D-sub 9F/3 wire	A5E02611774


#### Spare parts

Description	Article No.
Add-on modules for FUE950 (only for 7ME348 versions)	
Pulse input module (2 inputs)	A5E03461432
Pulse output module (2 outputs)	A5E03461436
Combined pulse in-/output module (2 inputs and 1 output)	A5E03461437
RS 232 module (M-Bus protocol)	A5E03461459
RS 485 module (M-Bus protocol)	A5E03461512
M-Bus module	A5E03461516
Combined current output module, 2 x passive $4 \dots 20 \text{ mA}$	A5E03461583
Connection cable for option modules (types: Pulse, RS 232/RS 485, M-Bus, mA) (special connection cable with 2 plugs)	A5E03461585
Power supply for FUE950 (only for 7ME348 versions)	
3.6 V D-cell battery for SITRANS FUE950	A5E03461708
230 V AC supply module (incl. internal fuse T50 mA L 250 V and back-up battery) for SITRANS FUE950	A5E03461717
24 V AC supply module for SITRANS FUE950, incl. back-up battery	A5E03461719
Pocket for temperature sensors Pt500 (for related 4-wire Pt500 type only, 1 pc.)	
Stainless steel pocket (1 pc.), 135 mm length for 6 mm sensor diameter, max. PN 40 and max. 5 m/s (recommended for 140 mm sensor length).	A5E03462868
Stainless steel pocket (1 pc.), 225 mm length for 6 mm sensor diameter, max. PN 40 and max. 5 m/s (recommended for 230 mm sensor length).	A5E03462870

Description	Article No.
Pt500 4-wire temperature sensor pair, with MID MI004 and PTB K7.2 approvals and verification (for related 4-wire sensor pocket types only)	
Pt500 sensor pair (6/140 mm), 4-wire with 5 m connection cable, 6 mm sensor diameter and 140 mm sensor length. MID approved DE-06-MI004-PTB011, PTB approved 22.77/09.01 (mentioned approvals are only valid if temp. sensors are used with the applicable temperature sensor pockets).	A5E03462872
PT500 sensor pair (6/230 mm), 4-wire with 5 m connection cable, 6 mm sensor diameter and 230 mm sensor length. MID approved DE-06-MI004-PTB011, PTB approved 22.77/09.01 (mentioned approvals are only valid if temp. sensors are used with the applicable temperature sensor pockets).	A5E03462878
FUE950 enclosure (only for 7ME348 versions)	
Bottom part of FUE950 enclosure (1 pc.)	A5E03461508
Snap fit for FUE950 enclosure (1 pc.)	A5E30461731
Pocket for Pt500 temperature sensors (for corresponding 2-wire Pt500 types only, 1pc.)	
Brass pocket 6 mm, G½B x 40 mm (PN 16), 1 pc.	A5E02611778
Brass pocket 6 mm, $G\frac{1}{2}B \times 85$ mm (PN 16), 1 pc.	A5E02611779
Brass pocket 6 mm, $G\frac{1}{2}B \times 120$ mm (PN 16), 1 pc.	A5E02611780
Stainless steel 6 mm, $G\frac{1}{2}B \times 85$ mm (PN 25), 1 pc.	A5E02611781
Stainless steel 6 mm, G½B x 120 mm (PN 25), 1 pc.	A5E02611783
Stainless steel 6 mm, G½B x 155 mm (PN 25), 1 pc.	A5E02611792
Stainless steel 6 mm, G½B x 210 mm (PN 25), 1 pc.	A5E02611793
Pt500 temperature sensor pair, 2-wire cable, 6 mm sensor diameter, with MID/EN-approval (for corresponding 2-wire sensor pocket types only)	
Cable length:	
2 m	A5E02611794
3 m	A5E02611795
5 m	A5E02611796
10 m	A5E02611798

#### Schematics

## Electrical connection for SITRANS FUS380/FUE380/FUE950 and MAG 5000/6000/FUE950

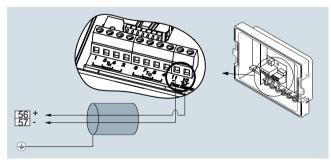

The diagram shows the connection between SITRANS FUE950 (terminals 10 and 11) and FUS380/FUE380 and MAG 5000/6000 (terminals 56 and 57). Temperature sensors must be connected to terminals 5 (1) and 6 (2) ( $T_{\rm H}$ ) and 7 (3) and 8 (4) ( $T_{\rm C}$ ).

#### Note

The right flowmeter pulse output value must be equal to the FUE950 pulse input value and must be checked via the user menu of the transmitter MAG 5000/6000 or nameplate of FUE380 or FUS380.